

User Manual

Four Channel's GSM VoIP Gateway

Model: GoIP4



Version 1.0
VOPTel Technology Co.,Ltd.
www.voptech.com

2009-10-20

Contents


1 Product Introduction.....	4
1.1 General Information.....	4
1.2 Protocol	4
1.3 Hardware Specification	5
1.4 Software Specification	5
1.5 List of the Package.....	5
1.6 Appearance	6
2 Installation	7
2.1 Installation Steps.....	7
2.3 LED Indicators	8
2.4 SMS Commands.....	8
3 Configuration Guide	9
3.1 Web Configuration Menu	10
3.2 Status.....	11
3.2.1 Phone Information	11
3.2.2 Network Information	12
3.2.3 GSM Module Information.....	12
3.3 Configurations.....	12
3.3.1 Language	13
3.3.2 Time Zone and Time Server.....	14
3.3.3 DTMF Min Detect Time Gap	14
3.3.4 Auto-Provision.....	14
3.3.5 Network Tone.....	15
3.3.6 GSM Caller ID Anonymous	16
3.3.7 GSM Band.....	16
3.3.8 GSM ISP	16
3.3.9 Auto Reboot.....	16
3.4 Call Settings	17
3.4.1 H.323 Phone.....	17
3.4.1.1 Direct Mode	17
3.4.1.2 Gatekeeper Mode	18
3.4.1.3 Advance Settings.....	19
3.4.2 SIP Phone	20
3.4.2.1 Advanced Settings	22
3.4.3 Media Setting.....	24
3.4.4 Codec Preference.....	26
3.4.5 NAT Traversal	26
3.4.5.1 Signaling NAT Traversal.....	26
3.4.5.2 Media NAT Traversal	27
3.5 Call Divert.....	28

3.5.1 Call Forward (From VoIP To PSTN)	29
3.5.2 Auto Forward Call To PSTN	29
3.5.3 Call Forward (From PSTN To VoIP)	30
3.5.4 Auto Forward Call To VoIP.....	30
3.6 SMS Disposal	31
3.6.1 SMS Sender	31
3.6.2 SMS Call Out	31
3.6.3 SMS Relay.....	35
3.6.3.1 SMS Relay To VoIP System.....	35
3.6.3.2 SMS Relay To GSM Network	36
3.7 PSTN Caller ID Transparent	36
3.8 GSM Group Mode.....	39
3.9 Dail Plan.....	40
3.10 Gain Settings... ..	42
3.11 Network Configuration	42
3.11.1 LAN Port.....	42
3.11.2 PC Port Configurations	44
3.12 Save Configuration	45
3.13 Discard Changes.....	46
3.14 Tools Menu	46
3.14.1 Online Upgrade.....	46
3.14.2 Change Password.....	47
3.14.3 Reset Configuration	47
3.14.4 Reboot the Device.....	47
4 Hardware Specifications	48
5 Manufactory Parameters	48

1 Product Introduction

1.1 General Information

A VoIP GSM Gateway enables direct routing between IP and GSM network without the use of a FXO port or the PSTN network. With this device, the usage of VoIP is greatly enhanced with significant savings on long distance and roaming charges.

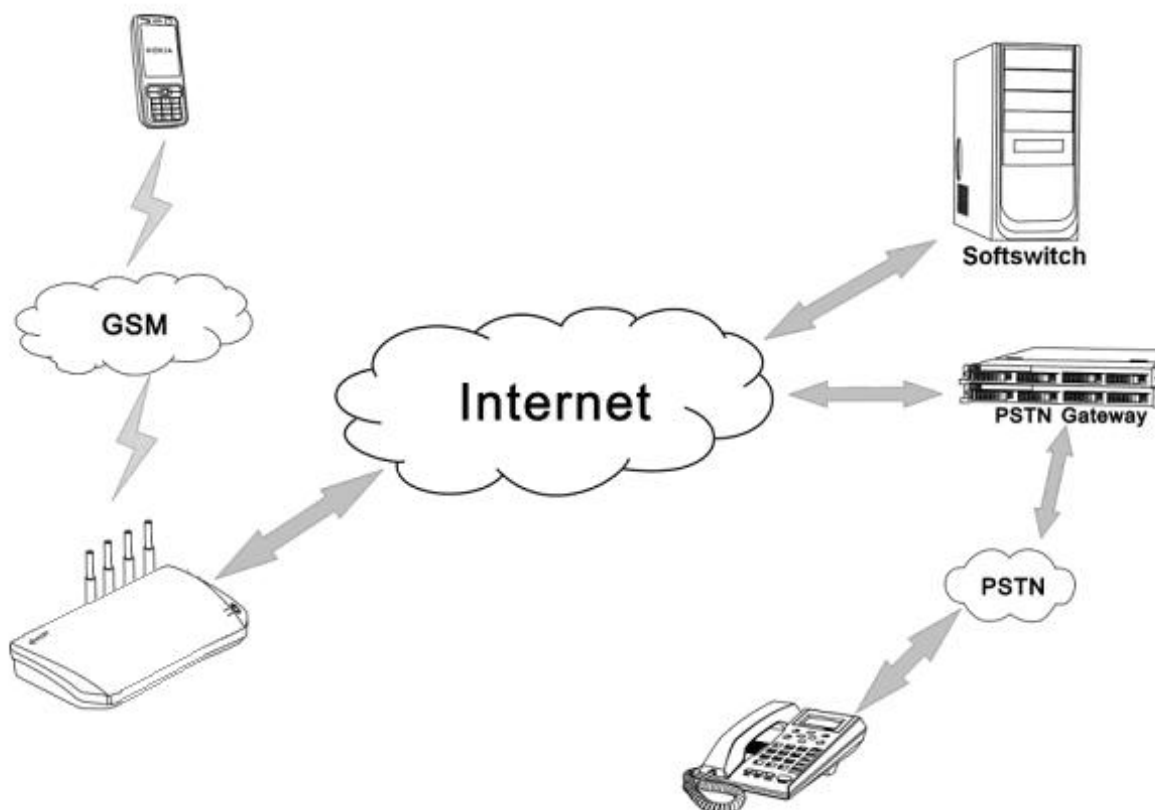

1.2 Protocol

- TCP/IP V4 (IP V6 auto adapt)
- ITU-T H.323 V4 Standard
- H.2250 V4 Standard
- H.245 V7 Standard
- H.235 Standard (MD5, HMAC-SHA1)
- ITU-T G.711 alaw/ulaw, G.729A, G.729AB, and G.723.1 Voice Codec
- RFC1889 Real Time Data Transmission
- Proprietary Firewall-Pass-Through Technology
- SIP V2.0 Standard
- Simple Traversal of UDP over NAT (STUN)
- Web-base Management

- PPP over Ethernet (PPPoE)
- PPP Authentication Protocol (PAP)
- Internet Control Message Protocol (ICMP)
- TFTP Client
- Hyper Text Transfer Protocol (HTTP)
- Dynamic Host Configuration Protocol (DHCP)
- Domain Name System (DNS)
- User account authentication using MD5
- Out-band DTMF Relay: RFC 2833 and SIP Info

1.3 Hardware Specification

- ARM9E Processor
- DSP for voice codec and voice processing
- Two 10/100 BaseT Ethernet ports with full compliant with IEEE 802.3
- LEDs for Ethernet port status
- Four GSM Channels' Connection

1.4 Software Specification

- LINUX OS
- Built-in HTTP Web Server
- PPPoE Dial-up
- NAT Broadband Router Functions
- DHCP Client
- DHCP Server
- Firmware On-line upgrade
- PSTN Caller ID transmit
- Multiple Language Support
- Supported call divert
- Supported PSTN auto call out to PSTN
- Supported Multi_devices Cooperate Mode(Group Mode)
- Supported SMS call out

1.5 List of the Package

- a) One GoIP4 Gateway main unit
- b) One DC12V/2000mA power adaptor
- c) One Ethernet cable (3M)

1.6 Appearance



1) LAN

Connect this port to an Ethernet Switch/Router, the Ethernet of a DSL modem, or other network access equipment.

2) PC

Connect a computer or other network device to this port.

3) POWER (DC12V/2000mA)


Connect the 12V/2000mA Adapter provided to this power jack.

4) Reset

Press this button to reset the GoIP4 Gateway to factory defaults.

2 Installation

2.1 Installation Steps

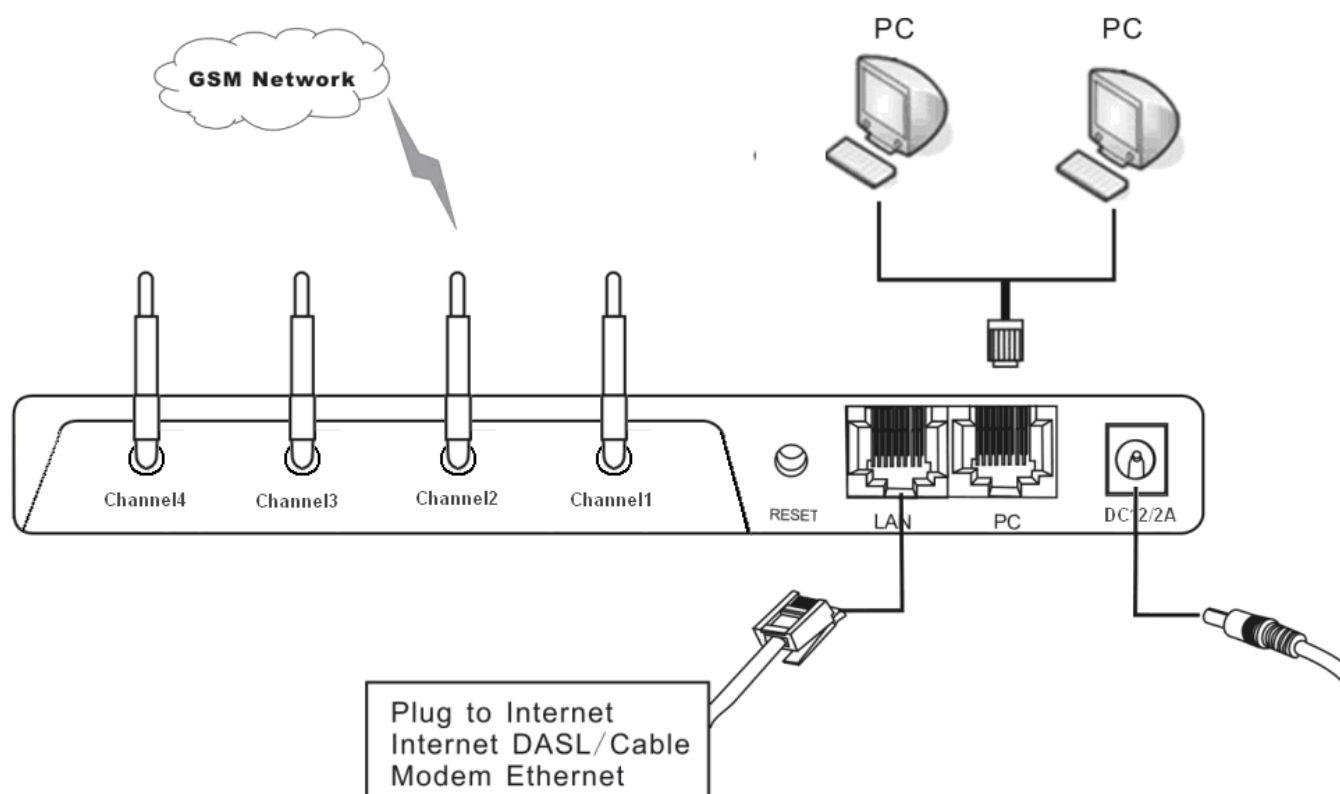

Please follow the connection diagram above to install the GoIP4 Gateway.

- Insert a GSM SIM card in the SIM card compartment located at the bottom of the GoIP4 Gateway's.
- Connect an Ethernet cable the LAN port of the GoIP4 Gateway and the other end to your existing network equipment.
- Connect an Ethernet cable to the PC Port of the GoIP4 Gateway and the other end to a PC or other network device (Optional).

- d) Connect the power adapter provided to the power jack of the GoIP4 Gateway.

2.3 LED Indicators

The following table defines the status of the LEDS located on the top case and on the RJ-45 connectors.

LED	DESCRIPTION
POWER	When GoIP4 Working, this LED will keep light;
RUN	1. When the GoIP4 is booting, this LED will flash 100ms ON and 100ms OFF. 2. When the GoIP4 is login your softswitch, this LED will flash 1s ON and 1s OFF.
LAN	When LAN port connecting to network, this LED will light and flash when has data through this port;
PC	When has devices use PC port, this LED will light and flash;
Channel 1	When the GoIP4's GSM channel1 login to ISP's system, this LED will flash 1s ON and 1s OFF;
Channel 2	When the GoIP4's GSM channel2 login to ISP's system, this LED will flash 1s ON and 1s OFF;
Channel 3	When the GoIP4's GSM channel3 login to ISP's system, this LED will flash 1s ON and 1s OFF;
Channel 4	When the GoIP4's GSM channel4 login to ISP's system, this LED will flash 1s ON and 1s OFF;

2.4 SMS Commands

GoIP4 supported some maintenance commands come from SMS.

FUNCTION	SMS CONTENT	REMARK
Obtain LAN Port Info	INFO	Not distinguish majuscule and lowercase
Reset device	RESET Password	Not distinguish majuscule and lowercase

Reboot device	REBOOT Password	Not distinguish majuscule and lowercase
---------------	-----------------	---

Note: In command **Reset** and **Reboot**, the Password is the GoIP4 device's admin password.

The command keywords can use majuscule and lowercase, but the password must distinguish majuscule or lowercase.

3 Configuration Guide


To configure the GoIP4 Gateway, you must login to its Web server via the LAN or PC port. The LAN port is factory preset to obtain an IP from the local DHCP host and the PC port is set to the fixed IP 192.168.8.1.

If a local DHCP host is available, the LAN will obtain an IP address automatically. To listen to the IP address assigned, just dial a call via the GoIP4 Gateway's SIM card phone number. When the call is connected, you will hear a dial tone. Just dial "*01#" for English voice prompt on the LAN IP and "*00#" for Chinese voice prompt on the LAN IP. The LAN IP Address can also be obtained by sending a SMS message to the GSM phone number. The GoIP4 will then reply with a SMS message containing the LAN IP address.

If you want obtained LAN port IP by sending a SMS message, please send "INFO" or "info".

If a local DHCP host is not available, you can then access the GoIP4 Gateway via the PC port. You will need to change your computer's LAN configuration via the Network Connections under the Control Panel.

Windows: Control Panel-->Network Connections-->Local Connectionism's Property-->TCP/IP Protocol's Property

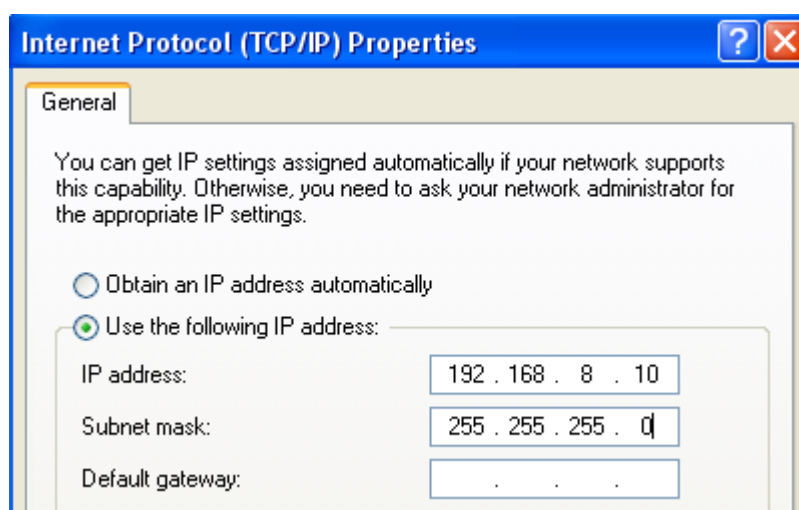

Set an unused IP address that is in the same segment as the PC port address.


Once either the IP address of the LAN or PC port is known, you are now ready to access the Web server of GoIP4 Gateway.

3.1 Web Configuration Menu

If your computer is connected to the GoIP4 Gateway via the LAN port network segment, you need to type the LAN IP address of the GoIP4 Gateway in your Web Browser to access the Web server of the GoIP4 Gateway. If not, you should type GoIP4's PC port IP address (192.168.8.1) in the Web Browser.



If the connection is correct, the Web Browser will prompt you to enter the "User name" and "Password" as shown below.

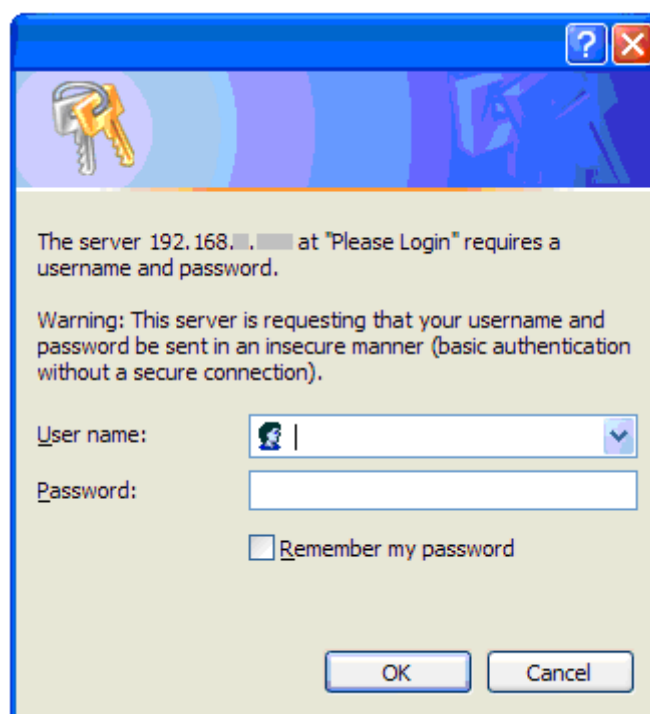

Enter the User name and Password and the press OK to access the GoIP4 Gateway Web Server. The default for both user name and password is "admin".

3.2 Status

The Status page shown below is the default / home page of the GoIP4 Web server.



<div>Status</div> <div>Configurations</div> <div>Tools</div>	Status					
	Phone Information		Network Information		GSM Module Information	
	Serial Number	GOIP409100019	LAN Port	192.168.2.208	GSM1 Model	SIMCOM_SIM300
	Firmware Version	GHS-4.01-1	LAN MAC	00:11:BE:02:F6:EE	GSM1 SIM	INSERTED
	Hardware Model	GoIPx4	PC Port	192.168.8.1	GSM1 Signal	26
	Line Register 1 Status	LOGOUT	PPPoE	Disabled	GSM1 Status	LOGIN
	Line Register 2 Status	LOGOUT	Default Route	192.168.2.253	GSM2 Model	SIMCOM_SIM300
	Line Register 3 Status	LOGOUT	DNS Server	202.96.134.133	GSM2 SIM	NOT INSERTED
	Line Register 4 Status	LOGOUT			GSM2 Signal	27
					GSM2 Status	LOGOUT
					GSM3 Model	SIMCOM_SIM300
					GSM3 SIM	NOT INSERTED
					GSM3 Signal	19
					GSM3 Status	LOGOUT
					GSM4 Model	SIMCOM_SIM300
				GSM4 SIM	NOT INSERTED	
				GSM4 Signal	25	
				GSM4 Status	LOGOUT	

3.2.1 Phone Information

A. Serial Number

Each Gateway has a unique serial number assigned by the factory such as GOIP409100019. This number is important for centralized configuration, technical support, and warranty. This number is printed on the bottom of the Gateway and is associated with your software license.

B. Firmware Version

Firmware version identifies the firmware version of the Gateway such as GHS-4.01-1.

C. Hardware Mode

This field shows terminal's hardware type.

D. Phone Status

This field shows the status of Line's connection status. If the connection is successful, this field displays LOGIN; otherwise, it displays LOGOUT.

3.2.2 Network Information

A. LAN Port Configuration

This field displays the status of the LAN port.

B. PC Port Configuration

This field displays the status of the LAN port.

C. PPPoE

If PPPoE is enabled, it displays its status.

D. Default Route

This field displays the IP address of the default routing Gateway.

E. DNS Server

This field displays the IP address of the Domain Name Server.

3.2.3 GSM Module Information

A. GSM Module

This field displays the GSM module type.

B. GSM Signal

This field displays the GSM signal status.

C. GSM Status

This field shows the status of GSM connection status. If the connection is successful, this field displays LOGIN; otherwise, it displays LOGOUT.

3.3 Configurations

Click on the "Configurations" tab on the left hand column to access the device configuration menu: **Preference, Network, Call Settings, Call Divert, Save Changes, and Discard Changes.**


Status Configurations Preferences Network Call Settings Call Divert Save Changes Discard Changes Tools	Preference			
	Language(语言)	<input type="text" value="简体中文"/>	Network Tones	<input type="text" value="China"/>
	Time Zone	<input type="text" value="GMT+8"/>	GSM CallerID Anonymous	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
	Time Server	<input type="text" value="pool.ntp.org"/>	GSM Band	<input type="text" value="900/1800"/>
	DTMF Min Detect Time Gap	<input type="text" value="80"/>	SMS Sender	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
	Auto-provision	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	Reboot Time	<input type="text" value="04:00"/>
	Remote Control>>			
	Network Configuration			
	LAN Port	<input type="text" value="DHCP"/>	PC Port	<input type="text" value="Static IP"/>
	802.1q VLAN	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	IP Address	<input type="text" value="192.168.8.1"/>
Advanced>>		Subnet Mask	<input type="text" value="255.255.255.0"/>	
		DHCP Server	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	
		Starting Address	<input type="text" value="192.168.8.100"/>	
		Ending Address	<input type="text" value="192.168.8.120"/>	
		Static DNS(optional)	<input type="text"/>	
		Advanced>>		
Call Settings				
Endpoint Type	<input type="text" value="H.323 Phone"/>	Advanced Settings>>		
Endpoint Mode	<input type="text" value="Gatekeeper Mode"/>	Media Settings>>		
Config Mode	<input type="text" value="Single Config"/>			

Click on "Preference" in the left menu of the configuration web, and the screen will be displayed as below:

Preference			
Language(语言)	<input type="text" value="简体中文"/>	Network Tones	<input type="text" value="China"/>
Time Zone	<input type="text" value="GMT+8"/>	GSM CallerID Anonymous	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Time Server	<input type="text" value="pool.ntp.org"/>	GSM Band	<input type="text" value="900/1800"/>
DTMF Min Detect Time Gap	<input type="text" value="80"/>	SMS Sender	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Auto-provision	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	Reboot Time	<input type="text" value="04:00"/>
Remote Control>>			

3.3.1 Language

Currently GoIP4 supports English, Simplified Chinese and Traditional Chinese. Select the language desired and the Web page will be shown in the language selected accordingly.

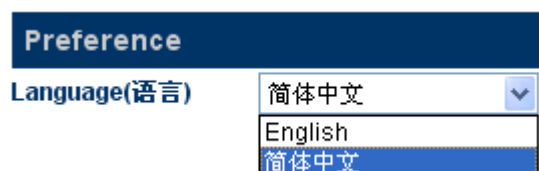


A screenshot of a web interface showing a 'Preference' section. Under the heading 'Language(语言)', there is a dropdown menu. The menu is open, showing three options: '简体中文' (Simplified Chinese), 'English', and '简体中文' (Simplified Chinese). The first '简体中文' option is highlighted with a blue background.

The language can also be selected at the top of the web page. Once selected, the webpage language is refreshed immediately. However, the language selection is not saved until the Save Changes icon is clicked.



3.3.2 Time Zone and Time Server

 The GoIP4 Gateway supports Network Time Protocol (NTP) to obtain the date and time information from an NTP server (Time Server). The time zone is specified as in GMT \pm offset. For example, the Pacific Standard Time is GMT-8, and the Pacific Daylight Time is GMT-7.



A screenshot of the configuration interface for Time Zone and Time Server. The 'Time Zone' field contains 'GMT+8' and the 'Time Server' field contains 'pool.ntp.org'.

Note: The GoIP4 Gateway supports CDR and Billing Information, it is important to set up these two parameters properly.

3.3.3 DTMF Min Detect Time Gap



A screenshot of the configuration interface for DTMF Min Detect Time Gap. The field is labeled 'DTMF Min Detect Time Gap' and contains the value '50'.

This parameter use to limit two same DTMF digit's minimum time gap, the range is 60ms to 120ms, default is 80ms.

If you encounter double digit problem, gain it to more, if you encounter lose digit, then gain it to less.

3.3.4 Auto-Provision

The GoIP4 Gateway supports Auto Provisioning which enables configuration parameters

to be set automatically without human intervention. The Auto Provisioning supports both HTTP and TFTP protocols. For higher security, encrypted configuration file is also supported. This feature requires external Auto Provisioning Server. Please contact your service provider for further information on this.

Auto-provision	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Provision Server	<input type="text"/>
Provision Interval	<input type="text"/>

3.3.5 Network Tone

Network Tones are a set of tones used for VoIP calls. Select one of the countries defined or customized to define your own Network Tones.

Network Tones	<div><div>China</div><div>Australia</div><div>China</div><div>Hong Kong</div><div>New Zealand</div><div>United Kingdom</div><div>United States</div><div>Customized</div></div>
----------------------	---

You can configure the Network Tones as Customized option:

Network Tones	<div>Customized</div>
Dial Tone	<input type="text"/>
Ring Back Tone	<input type="text"/>
Busy Tone	<input type="text"/>
Indication Tone	<input type="text"/>

Each tone listed above is defined in the following format:

nc, rpt, c1on, c1off, c2on, c2off, c3on, c3off, f1, f2, f3, f4, p1, p2, p3, p4

Where:

nc is the number of cadences

rpt is the repeat counter(0 - infinite, 1~n - repeat 1~n times)

c1on is the cadence one on (in milliseconds)

c1off is the cadence one off (in milliseconds)

c2on is the cadence two on (in milliseconds)

c2off is the cadence two off (in milliseconds)

c3on is the cadence three on (in milliseconds)

c3off is the cadence three off (in milliseconds)

f1 is the tone #1 frequency (300Hz-3000Hz)

f2 is the tone #2, frequency (300Hz-3000Hz)

f3 is the tone #3 frequency (300Hz-3000Hz)

f4 is the tone #4 (300Hz-3000Hz)

p1 is the attenuation index for f1, 0~31(0=3dB, -1dB increments)

p2 is the attenuation index for f2, 0~31(0=3dB, -1dB increments)

p3 is the attenuation index for f3, 0~31(0=3dB, -1dB increments)

p4 is the attenuation index for f4, 0~31(0=3dB, -1dB increments)

For example, the tone definition for a tone of 450Hz with a cadence of 700 ms on and 1000 ms off is 1,0,700,1000,0,0,0,0,450,0,0,0,20,0,0,0

3.3.6 GSM Caller ID Anonymous

GSM CallerID
Anonymous

☐ Enable ☒ Disable

Some GSM ISP allows the caller disable it phone number, it must GSM ISP supported;

3.3.7 GSM Band

GSM Band

900/1800	▼
900/1800	
850/1900	

GoIP4 Supported quad GSM bands;

Note: About GSM bands supported, it base as which model GSM module we was used, some old GoIP gateway just supported two bands, so it will different at differ batch's GoIP devices;

3.3.8 GSM ISP

When GoIP searched more ISP signaling it can use, GoIP will show you a GSM ISP list, you can choice any one ISP and the GoIP will lock itself just register to your choice one;

3.3.9 Auto Reboot

<input checked="" type="checkbox"/> Auto Reboot
Reboot Time <input type="text" value="04:00"/>

This option enable GoIP4 auto reboot each day, GoIP4 will auto reboot itself at Reboot Time. If meet a current called, the action will auto delay after the call finish.

3.4 Call Settings

Click on the "Call Settings" to configure the VoIP call settings. The first thing to set is the Endpoint Type: H.323 or SIP.

Call Settings		
Endpoint Type	<div>H.323 Phone</div> <div>H.323 Phone</div> <div>SIP Phone</div>	Advanced Settings>> Media Settings>>

3.4.1 H.323 Phone

For H.323 protocol, 2 Endpoint Modes are supported: Direct Mode and Gatekeeper Mode.

Call Settings	
Endpoint Type	<div>H.323 Phone</div>
Endpoint Mode	<div>Direct Mode</div> <div>Direct Mode</div> <div>Gatekeeper Mode</div>

3.4.1.1 Direct Mode

In Direct Mode, GoIP4 running at H.323 P to P type.

Call Settings		
Endpoint Type	<div>H.323 Phone</div>	Advanced Settings>>
Endpoint Mode	<div>Direct Mode</div>	Media Settings>>
Phone Number	<input type="text"/>	
Display Name	<input type="text"/>	
H.323 ID	<input type="text"/>	
Default Voice Gateway	<input type="text"/>	

A. H.323 Phone Number

H.323 phone number: fill the login number (E164) here.

B. Display Name

Display name is the name to be displayed on the called VoIP party.

C. H.323 ID

If the system requires an H.323 ID as a method of Authentication, enter the H.323 ID provided.

D. Default Voice Gateway

This field assigns the IP address or the domain name of the gatekeeper or other VoIP gateway. The port number can be added with the colon ":" symbol. For example: 192.168.1.70:8080.

GolP4 will send out all VoIP calls to this address.

3.4.1.2 Gatekeeper Mode

Call Settings	
Endpoint Type	H.323 Phone
Endpoint Mode	Gatekeeper Mode
Config Mode	Single Config
Phone Number	
GateWay Prefix	
Display Name	
H.323 ID	
Gatekeeper Address	
<input type="checkbox"/> Enable VOS/AVS Signaling Encryption	
<input type="checkbox"/> Enable Authentication	

The "Gatekeeper Mode" mode allows a user to setup the GolP4 Gateway by registering to the gatekeeper with one H.323 account.

A. H.323 Phone Number

H.323 phone number: fill the login number (E164) here.

B. Gateway Prefix

If login with a Prefix method fill the prefix number (do not fill the Phone number).

C. Display Name

Display name is the name to be displayed on the called VoIP party.

D. H.323 ID

If the system requires an H.323 ID as a method of Authentication, enter the H.323 ID provided.

E. Gatekeeper Address

This field assigns the IP address or the domain name of the gatekeeper. The port number can be added with the colon ":" symbol. For example: 192.168.1.70:8080.

F. Enable Authentication

	<input checked="" type="checkbox"/> Enable Authentication
Authenitcation ID	
Password	

If H.235 Authentication is required, enable this field and fill in the values as provided.

Call Settings	
Endpoint Type	H.323 Phone
Endpoint Mode	Gatekeeper Mode
Config Mode	<div>Single Config</div> <div>Single Config</div> <div>Config by Line</div> <div>Config by Group</div>

GolP4 has three types configure modes in **Gatekeeper Mode**;

Configure By Single: All four channels use same one H.323 account connect to gatekeeper;

Configure By Line: Each channel will use a single account connect to H.323 gatekeeper;

Configure By Group: Each VoIP channel will register to Gatekeeper base differ Group;

3.4.1.3 Advance Settings

Click "Advance Settings" to access additional H.323 parameters as shown below.

Advanced Settings<<	
RAS Port	<input type="text"/>
Q.931 Port	<input type="text"/>
H.245 Port	<input type="text"/>
Fast Start	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Register Mode	Register Multiple Nur
DTMF Signaling	Outband
Signaling QoS	None
Signaling NAT Traversal	None

A) RAS Port

RAS Port is an unreliable channel which is used to convey the registration, admissions, bandwidth change, and status messages between two H.323 entities.

B) Q.931 Port (Call Signaling Port)

Call Signaling Port is a reliable channel which is used to convey the call setup and release messages between two H.323 endpoints.

 
C) H.245 Port (Media Control Ports)

Media control port is the port or port range used by the H.245 media control protocol.

D) Fast Start

Enable or disable the Fast Start in H.225.0. Most H.323 terminals or Gateways support the Fast Start feature.

E) Register Mode

Register ModeA dropdown menu with a blue border and a downward arrow on the right. The menu is open, showing three options: "Register Multiple Nur", "Register Multiple Numbe", and "Register Multiple Times". The second option is highlighted in blue.

 
Register Multiple Nur
Register Multiple Numbe
Register Multiple Times

Register Multiple Numbers: The GoIP4 Gateway sends registration request in one signaling packet to the gatekeeper. In the mode, one signaling packet includes two VoIP line's registration information.

Register Multiple Times: In this mode, the GoIP4 Gateway will register like two terminals.

F) DTMF Signaling**1) DTMF TYPE**

DTMF signals can be sent over to the called party once a call is established. GoIP4 Gateway supports both **Inband** and **Outband** DTMF signal types.

DTMF SignalingA dropdown menu with a blue border and a downward arrow on the right. The menu is open, showing three options: "Outband", "Inband", and "Outband". The third option is highlighted in blue.

Outband
Inband
Outband

For **Inband** DTMF type, DTMF signals are generated locally at the calling phone and then send to the called party as part of the voice signals. This method is not reliable since the quality of the DTMF signals is subject to the Codec used and the quality of the network traffics.

For **Outband** DTMF type, DTMF signal commands are sent to the called party and the actual DTMF signals are actually generated by the called party. This method allows more reliable DTMF signaling. However, it requires the called party to support this feature in order for this to work properly. GoIP4 Gateway supports RFC2833 Outband DTMF protocols.

2) DTMF Payload Type

DTMF Payload Type is by RFC2833 protocol to carry the tone definitions for various applications. The default DTMF Payload Type is 96. Please consult your VoIP service provider for the proper setting if required.

3.4.2 SIP Phone

Set the "**Endpoint Type**" to SIP Phone for connections to SIP Servers.

GoIP4 has two types configure modes in SIP protocol;

Call Settings	
Endpoint Type	SIP Phone
Config Mode	Single Server Mode
	Single Server Mode
	Config by Line

Configure By Single: All four channels use same one SIP account connect to SIP server;

Configure By Lines: Each channel will use a private SIP account connect to SIP server;

GolP4 Gateway's SIP configure page as follow:

Call Settings	
Endpoint Type	SIP Phone
Single Server Mode	
Phone Number	<input type="text"/>
Display Name	<input type="text"/>
SIP Proxy	<input type="text"/>
SIP Registrar	<input type="text"/>
Register Expiry(s)	<input type="text"/>
Outbound Proxy	<input type="text"/>
Home Domain	<input type="text"/>
Authentication ID	<input type="text"/>
Password	<input type="text"/>
Dial Plan	<input type="text"/>
Call Forward Type	Not Forward
Call Forward Number	<input type="text"/>
Backup Server	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

A) Phone Number

Enter a SIP phone number.

B) SIP Proxy

Enter the SIP proxy IP address or domain name. If the registration port isn't 5060, then add ":" and the port number. An example is **sip.voptech.com:8080**.

C) SIP Registrar Server

If the Registrar Server is different from the SIP Proxy, enter its IP address or domain name in this field. If the registration port isn't 5060, then add ":" and the port number. An example is **sip.voptech.com:8080**.

D) Home Domain

SIP Networks sometimes use the Home Domain name as an identifier. Enter this field as required.

E) Authentication ID

Enter the Authentication ID as provided.

F) Password

Enter the authentication password as provided.

G) Display Name

Enter this field for the name to be displayed on the called VoIP party.

H) Backup Server

Backup Server	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Backup SIP Proxy	<input type="text"/>
Backup SIP Registrar	<input type="text"/>
Backup Home Domain	<input type="text"/>
Fail-retry Interval(1-60s)	<input type="text"/>

The GoIP4 Gateway supports one Backup Server as an alternative to the main server. Once registration to the main server fails, the GoIP4 Gateway will try to register to the Backup Server.

I) Outbound Proxy

OutBound proxies are devices that will forward SIP signaling (and frequently RTP media traffic too). OutBound proxies are used for a number of reasons, including, firewall traversal - both in parallel with a firewall and situated in the Internet as a Session Border Controller, and also for hiding customer IP addresses - calls are all routed through one point so that a public ITSP address can be used for accessing the customers, rather than the customer's own IP address.

If required, enter this field with the outbound proxy IP address or domain name as provided.

3.4.2.1 Advanced Settings

Click on "Advance Settings" tab on the top right corner of the Call Setting page to display all the parameters available, as shown below, for programming. These parameters allow more advanced control over the SIP signaling and media preference.

Advanced Settings<<

Signaling Port

☒ SIP 183

NAT Keep-alive ☒ Enable ☐ Disable

Advanced Timing>>

DTMF Signaling

Signaling QoS

Signaling Encryption

Signaling NAT Traversal

Media Settings>>

A) Signaling Port (SIP Local port)

The default SIP port is 5060. Change this as required.

B) NAT Keep-alive

NAT Keep-alive ☒ Enable ☐ Disable

The NAT Keep-alive feature sends a null packet to the SIP Proxy periodically in order to keep the NAT open for incoming data traffics.

C) Advanced Timing Settings

Advanced Timing<<

No Answer Expiry (32-180s)

NICT Expiry(2-180s)

ICT Expiry(5-360s)

Retransmit T1(200-2000ms)

Retransmit T2(2000-8000ms)

Some SIP proxies may have special timing requirements. Change these parameters as required.

D) Signaling QoS

Signaling QoS

None
IP TOS
DiffServ

Signaling QoS improves the performance of SIP signaling. If local network device

Copyright©2009 VOPTel Technology Co., Ltd All Rights Reserved.

 
supports Qos, select this field accordingly. Please consult your network administrator for further information.

E) DTMF Signaling

1) DTMF TYPE

DTMF signals can be sent over to the called party once a call is established. GoIP4 Gateway supports both **Inband** and **Outband** DTMF signal types.

DTMF Signaling



Outband
Inband
Outband

For **Inband** DTMF type, DTMF signals are generated locally at the calling phone and then send to the called party as part of the voice signals. This method is not reliable since the quality of the DTMF signals is subject to the Codec used and the quality of the network traffics.

For **Outband** DTMF type, DTMF signal commands are sent to the called party and the actual DTMF signals are actually generated by the called party. This method allows more reliable DTMF signaling. However, it requires the called party to support this feature in order for this to work properly. GoIP4 Gateway supports both RFC2833 and SIP INFO Outband DTMF protocols.

2) DTMF Payload Type

DTMF Payload Type is by RFC2833 protocol to carry the tone definitions for various applications. The default DTMF Payload Type is 96. Please consult your VoIP service provider for the proper setting if required.

3.4.3 Media Setting

Click on "**Media Settings**" in the "**Call Setting**" menu to access the parameters available for media settings.

Media Settings<<

RTP Port (range)	16384 - 32768
Packet Length (ms)	20
Jitter Buffer Mode	Fixed ▼
Minimum Jitter	60
Maximum Jitter(soft limit)	
Media QoS	None ▼
	<input type="checkbox"/> Enable RC4 Encryption
	<input type="checkbox"/> Symmetric RTP
Media NAT Traversal	None ▼

Audio Codec Preference>>

A) RTP Port Range

This parameter specifies the range of the RTP (Real Time Protocol) Ports used by the GolP4 Gateway. If your network limits the usable port range, this parameter may need to be modified. Please consult your network administrator for more information.

B) Packet Length

This parameter defines the voice packet length. The default setting is 20ms. The range is from 5ms to 40ms at an increment of 5 ms. Please note that some codes have a minimum packet length of more than 5 ms.

C) Jitter Buffer Mode

Jitter Buffer Mode	Fixed ▼
Minimun Jitter	
Maxinum Jitter(soft limit)	

Since data packets may arrives at different orders, the Jitter Buffer is used to hold the data packets received for re-arrangement according to the packet sequence number. Three Jitter Buffer Modes are supported: Adaptive, Sequential, and Fixed. The default is set to Adaptive mode with a minimum jitter of 60 ms and a maximum jitter of 220ms. Please consult your network administrator for more information on the network environment in order to determine the optimal settings.


D) Media Qos

Media QoS	None ▼
	None
	IP TOS
	DiffServ

Similar to the Signaling QoS, the Media Qos in intended to improve the voice performance or quality If your local network supports QoS

3.4.4 Codec Preference

Codec Preference allows a user to select the codes to be used and its priority to be selected for a voice call.

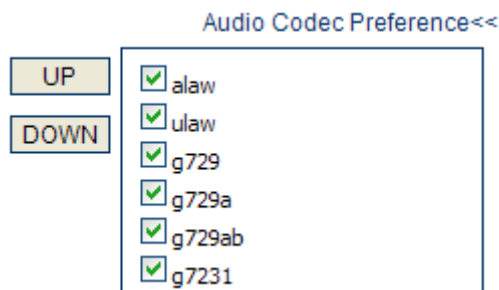


Click on the check box to enable a codec. Select a codec and then press the UP or DOWN button to move the position of the codec on the codec list with a priority in descending order.

Note: The voice code alaw and ulaw is G.711a and G.711u.

3.4.5 NAT Traversal

3.4.5.1 Signaling NAT Traversal

Signaling NAT traversal may be required if the GoIP4 Gateway is put behind a NAT (or multiple NATs). Depending on your network environment and SIP Server capabilities, this feature may or may not be turn on.

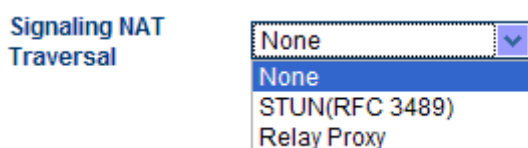

A) None

Select **None** to turn off this feature.

B) STUN (RFC 3489)

STUN (Simple Traversal of UDP (User Datagram Protocol) through NATs (Network Address Translators)) is a network protocol allowing a client behind a NAT (or multiple NATs) to find out its public address, the type of NAT it is behind and the internet-side port associated by the NAT with a particular local port.


Select **STUN (RFC 3489)** to use a STUN server for Signaling NAT Traversal. Enter the IP Address or the domain name of the STUN server to be used.

C) Relay Proxy

Relay proxy is a proprietary NAT traversal technology. Please consult your service provider for more information.

3.4.5.2 Media NAT Traversal

Similar to Signaling NAT Traversal, this feature allows media packets (RTP) to be routed properly in various network environments.

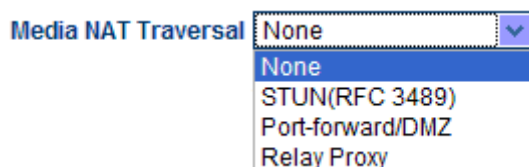

A) None

Select **None** to disable this feature.

B) STUN (RFC 3489)

STUN (Simple Traversal of UDP (User Datagram Protocol) through NATs (Network Address Translators)) is a network protocol allowing a client behind a NAT (or multiple NATs) to find out its public address, the type of NAT it is behind and the internet-side port associated by the NAT with a particular local port.

Select **STUN(RFC 3489)** to use a STUN server for Signaling NAT Traversal. Enter the IP Address or the domain name of the STUN server to be used.

C) Port forwarding Support

Port forwarding (sometimes referred to as tunneling) is the act of forwarding a network port from one network node to another. This technique can allow an external user to reach a port on a private IP address (inside a LAN) from the outside via a NAT-enabled router.

In order for this feature to work, the local network Gateway must support this feature and be set up properly. Please consult your network administrator for help to enable this **Port forwarding** feature.

D) Relay Proxy

Relay proxy is a proprietary NAT traversal technology. Please consult your service provider for more information.

Currently, the following 3 kinds of packaging mechanism are supported:

- **Mode 1:** The media uses UDP packets and (or) encrypt with multiple UDP port;
- **Mode 2:** The media uses UDP packets and (or) encrypt with single UDP port;
- **Mode 3:** The media uses TCP packets and (or) encrypt (UDP over TCP).

Media NAT Traversal	<input type="text" value="Relay Proxy"/>
Address	<input type="text"/>
Port	<input type="text"/>
User Name	<input type="text"/>
Password	<input type="text"/>
	<input type="checkbox"/> Encryption
Relay Mode	<input checked="" type="radio"/> 1 <input type="radio"/> 2 <input type="radio"/> 3

3.5 Call Divert

The Call divert feature controls the routing of calls between VoIP and GSM.

Call Divert	
<input checked="" type="radio"/> Line1 <input type="radio"/> Line2 <input type="radio"/> Line3 <input type="radio"/> Line4	
Forward to PSTN	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Forward Number (VoIP To PSTN)	<input type="text"/>
Forward Password (VoIP To PSTN)	<input type="text"/>
Dial Plan(VoIP to PSTN)	<input type="text"/>
Forward to VoIP	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Forward Number (PSTN To VoIP)	<input type="text"/>
Forward Password (PSTN To VoIP)	<input type="text"/>
Dial Plan(PSTN to VoIP)	<input type="text"/>
GSM Group Mode	<input type="text" value="Disable"/>
SMS Mode	<input type="text" value="Disable"/>
CID Forward	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

3.5.1 Call Forward (From VoIP To PSTN)

Call Divert

☒ Line1 ☐ Line2 ☐ Line3 ☐ Line4

Forward to PSTN ☒ Enable ☐ Disable

Forward Number (VoIP To PSTN)

Forward Password (VoIP To PSTN)

Dial Plan(VoIP to PSTN)

Forward Number

Enter this field to forward all incoming VoIP calls to this number (PSTN or Mobile). Using “,” to add a 500ms delay to the dialing sequence. If this field is blank, calls will not be forwarded. The GoIP4 Gateway answers an incoming VoIP call and generates a dial tone. The caller can then dial a number (PSTN or Mobile) desired. Please see below if the

Forward Password

This field sets the password protection for using the GSM connection. If a password is entered, the GoIP4 Gateway will generate an indication tone and wait for the call to dial the

3.5.2 Auto Forward Call To PSTN

Forward Number (VoIP To PSTN)

When above option has parameter; GoIP4 will auto forward all VoIP call to this phone number;

When GoIP4 Call divert options “Forward Number (VoIP To PSTN)” is empty, GoIP4 has a default call forward rule.

A: When the be Callee ID is GoIP4’s SIP account number, GoIP4 will take the call and feed back a dial tone to VoIP caller; The means is VoIP caller must dial PSTN number when hear this dial tone.

B: When the Callee ID isn’t GoIP4’s SIP account number, GoIP4 will auto dial out this number thru GSM network.

C: At this moment, “Dial Plan(VoIP to PSTN)”still working.

3.5.3 Call Forward (From PSTN To VoIP)

Forward to VoIP	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Forward Number (PSTN To VoIP)	<input type="text"/>
Forward Password (PSTN To VoIP)	<input type="text"/>
Dial Plan(PSTN to VoIP)	<input type="text"/>

Forward Number

Forward all incoming calls from the GSM connection to the VoIP number specified in this field. Forward Password is not required once this field is set. If this field is blank, the GoIP4 answers an incoming GSM calls and then generates the VoIP dial tone. Please see below if the Forward Password is set. The caller can then dial a VoIP number manually. At the end, a pound (#) can be dialed to activate the dialing of the VoIP number immediately. If not, the VoIP number is dialed after a preset timeout.

Forward Password

This field sets the password protection for incoming GSM calls. If a password is entered, the GoIP4 Gateway will generate an indication tone after answering an incoming call. The caller is then ready to dial the password. Once the password is correctly entered, the GoIP4 Gateway generates a VoIP dial tone and waits for the caller to dial a VoIP number.

3.5.4 Auto Forward Call To VoIP

Forward Number (PSTN To VoIP)	<input type="text"/>
----------------------------------	----------------------

When GoIP4's above option has parameter; GoIP4 will forward all PSTN incoming call to this VoIP number;

When GoIP4 Call divert options "Forward Number (PSTN To VoIP)" is empty, GoIP4 will auto accept all PSTN incoming call and feed back a dialtone to de caller;

3.6 SMS Disposal

3.6.1 SMS Sender

SMS Sender	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
SMS Server IP	<input type="text"/>
SMS Server Port	<input type="text"/>
SMS Client ID	<input type="text"/>
Password	<input type="text"/>

Voptech offer a free server software for achieve GoIP4 send out SMS to GSM network, it isn't a VoIP protocols; If your are a programmer, you can develop the sender software by yourself;

3.6.2 SMS Call Out

GoIP4 Gateway supported SMS call. In this mode, when GoIP4 Gateway received a SMS send from any one mobile phone, it will auto make a call to SIP server.

If you want use this function, select the [SMS Dial](#) option in configuration page.

Call Divert			
Forward to PSTN	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	SMS Mode	<input type="text" value="Dial"/>
Forward Number (VoIP To PSTN)	<input type="text"/>	SMS Dial	<input type="text" value="Mode 1"/>
Forward Password (VoIP To PSTN)	<input type="text"/>	SMS Dial Prefix	<input type="text"/>
Dial Plan(VoIP to PSTN)	<input type="text"/>	PSTN Forward Fail	<input type="text" value="Drop The Call"/>
Forward to VoIP	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	CID Forward	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Forward Number (PSTN To VoIP)	<input type="text"/>		
Forward Password (PSTN To VoIP)	<input type="text"/>		
Dial Plan(PSTN to VoIP)	<input type="text"/>		

GoIP4 supported three types SMS Dial:

SMS Mode	<input type="text" value="Dial"/>
SMS Dial	<input type="text" value="Mode 1"/> <input type="text" value="Mode 1"/> <input type="text" value="Mode 2"/> <input type="text" value="Mode 3"/>

A: Mode 1

GoIP4 dial the call use SMS sender call ID

B: Mode 2

GoIP4 dial the call via itself VoIP account and add the SMS sender phone number to Call Divert option's Forward Number (VoIP to PSTN) automatic.

C: Mode 3

GoIP4 dial the call via itself VoIP account and add the SMS sender phone number to SIP invites be call number.

D: SMS Dial Prefix

When GoIP4 dial a SMS call, it will automatic add this option's digit in be Called ID.

- **Mode 1 examples:**

A. GoIP4 use SMS Dial Mode 1:

SMS Settings	
SMS Mode	Dial
SMS Dial	Mode 1
SMS Dial Prefix	

One mobile phone's number is (86)13800000000, it sends a SMS "8675588228822" to GoIP4's GSM SIM card. When GoIP4 device receive this SMS, it will auto to call number 8675588228822, and the caller is number 8613800000000.

The sent out signaling as follow:

```

Sending Message to 192.168.2.1:5060:
INVITE sip: 8675588228822@192.168.2.1:5060;transport=udp SIP/2.0
Via: SIP/2.0/UDP 192.168.2.189:5060;rport;branch=z9hG4bK1686911003
From: <sip: 8613800000000@192.168.2.1:5060>;user=phone;tag=626918067
To: <sip: 8675588228822@192.168.2.1>
Call-ID: 1835068843@192.168.2.189:5060
CSeq: 2 INVITE
Contact: <sip: 8613800000000@192.168.2.189:5060>
Max-Forwards: 30
User-Agent: VOPTech
Allow: INVITE, ACK, BYE, CANCEL, OPTIONS, NOTIFY, REFER, REGISTER, MESSAGE, INFO, SUBSCRIBE
Content-Type: application/sdp
Content-Length: 226

```

B. GoIP4 use SMS Dial Mode 1 and add a prefix as 999:

SMS Mode	Dial
SMS Dial	Mode 1
SMS Dial Prefix	999

One mobile phone's number is (86)13800000000, it sends a SMS "8675588228822" to GolP4's GSM SIM card. When GolP4 device receive this SMS, it will auto to call number as 9998675588228822, and the caller is number 8613800000000.

The sent out signaling as follow:

Sending Message to 192.168.2.1:5060:

INVITE sip: 9998675588228822@192.168.2.1:5060;transport=udp SIP/2.0

Via: SIP/2.0/UDP 192.168.2.189:5060;rport;branch=z9hG4bK1686911003

From: <sip: 8613800000000@192.168.2.1:5060>;user=phone;tag=626918067

To: <sip: 9998675588228822@192.168.2.1>

Call-ID: 1835068843@192.168.2.189:5060

CSeq: 2 INVITE

Contact: <sip: 8613800000000@192.168.2.189:5060>

Max-Forwards: 30

User-Agent: VOPTech

Allow: INVITE, ACK, BYE, CANCEL, OPTIONS, NOTIFY, REFER, REGISTER, MESSAGE, INFO, SUBSCRIBE

Content-Type: application/sdp

Content-Length: 226

● Mode 2 example:

GolP4 use SMS Dial Mode 2:

SMS Dial	Mode 2
SMS Dial Prefix	

One mobile phone's number is (86)13800000000, it sends a SMS "8675588228822" to GolP4's GSM SIM card. When GolP4 device receive this SMS, it will auto to call number as 8675588228822, and the caller number is GolP4's SIP account number.

GolP4 will set the SMS sender number to "Call Divert "option's "Forward Number (VoIP to PSTN" automatic. The result is, when SIP server receives the SMS call and call back this GolP4 then GolP4 will auto call the SMS sender via GSM network.


The sent out signaling as follow:

```
Sending Message to 192.168.2.1:5060:␣  
INVITE sip: 8675588228822@192.168.2.1:5060;transport=udp SIP/2.0␣  
Via: SIP/2.0/UDP 192.168.2.189:5060;rport;branch=z9hG4bK92531725␣  
From: <sip:20001@192.168.2.1:5060>;user=phone;tag=740569827␣  
To: <sip: 8675588228822@192.168.2.1>␣  
Call-ID: 464713443@192.168.2.189:5060␣  
CSeq: 3 INVITE␣  
Contact: <sip:20001@192.168.2.189:5060>␣  
Max-Forwards: 30␣  
User-Agent: VOPTech␣  
Allow: INVITE, ACK, BYE, CANCEL, OPTIONS, NOTIFY, REFER, REGISTER  
MESSAGE, INFO, SUBSCRIBE␣  
Content-Type: application/sdp␣  
Content-Length: 226␣
```

Use can add a SMS prefix with mode 2, it will work like mode 1.

- **Mode 3 example:**

GoIP4 use SMS Dial Mode 3:

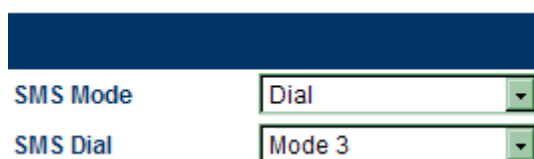

SMS Mode	Dial
SMS Dial	Mode 3

One mobile phone's number is (86)13800000000, it sends a SMS "8675588228822" to GoIP4's GSM SIM card. When GoIP4 device receive this SMS, it will auto to call number as 8675588228822*(86)13800000000, and the caller number is GoIP4's SIP account number.

The sent out signaling as follow:

Sending Message to 192.168.2.1:5060:

**INVITE sip: 8675588228822*8613800000000@192.168.2.1:5060;transport=udp
SIP/2.0**

Via: SIP/2.0/UDP 192.168.2.180:5060;branch=z9hG4bK620642232

From: <sip:20001@192.168.2.1:5060>;user=phone;tag=1333994780

To: <sip: 8675588228822*8613800000000@192.168.2.1>

Call-ID: 52754291@192.168.2.180

CSeq: 2 INVITE

Contact: <sip:20001@192.168.2.180:5060>

Max-Forwards: 30

User-Agent: VOPTech

**Allow: INVITE, ACK, BYE, CANCEL, OPTIONS, NOTIFY, REFER, REGISTER,
MESSAGE, INFO, SUBSCRIBE**

Content-Type: application/sdp


Content-Length: 226

Use can add a SMS prefix with mode 3, it will work like mode 1.

Use can add a SMS prefix with mode 3, it will work like mode 1.

3.6.3 SMS Relay

GoIP4 GSM gateway supported SMS relay.

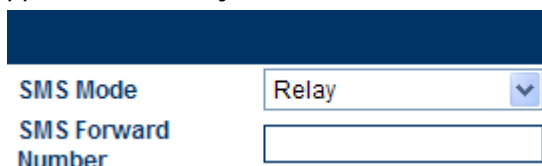

The SMS Forward Number is the receiver of your VoIP system; it will receive the SMS send from GoIP4 when some GSM phones send a SMS to GoIP4.

3.6.3.1 SMS Relay To VoIP System

When GoIP4 receive a SMS come from GSM network, it will auto relay to VoIP system's appointed number (SMS Forward Number);

Suppose the SMS Forward Number is 3999 and SMS sender number is "8613682626865 ", the SMS content is "075583185700 ";The GoIP4 will send a message to your VoIP system like follow:

```

MESSAGE sip:3999@192.168.2.1 SIP/2.0
Via: SIP/2.0/UDP 192.168.2.162:5060;branch=z9hG4bK1967685528
From: <sip:1638@192.168.2.1>;tag=667435795
To: <sip:3999@192.168.2.1>
Call-ID: 2094144847@192.168.2.162
CSeq: 4 MESSAGE
Contact: <sip:1638@192.168.2.162:5060>
Max-Forwards: 30
User-Agent: VOPTech
Content-Type: text/plain
Content-Length: 28

8613682626865
075583185700

```

3.6.3.2 SMS Relay To GSM Network

When GoIP4 receive a message come from SIP server as follow:

```

MESSAGE sip:1638@192.168.2.162:5060 SIP/2.0
From: <sip:3999@192.168.2.89>;tag=5031
To: <sip:1638@192.168.2.1>
Call-ID: 808807EB-A8B3-DD11-BBA6-005056C00008@192.168.2.89
CSeq: 3 MESSAGE
Contact: <sip:3999@192.168.2.89>
max-forwards: 16
date: Tue, 18 Nov 2008 06:36:37 GMT
user-agent: SIPPER for 3CX Phone
p-hint: usrloc applied
Content-Type: text/plain
Content-Length: 26

13682626800
Hello world

```

The GoIP4 will send a SMS to GSM number 13682626800, the SMS content is "Hello world".

3.7 PSTN Caller ID Transparent

In SIP protocol, GoIP4 support PSTN Caller ID transparent to VoIP via SIP Invite signaling;

SMS Mode	Disable
PSTN Forward Fail	Drop The Call
CID Forward Mode	<div>Disable</div> <div>Use Remote Party ID</div> <div>Use CID as SIP Caller ID</div>

Disable: Disable PSTN Caller ID transparent to VoIP;

Use Remote Party ID: GoIP4 add Caller ID in SIP invite's Remote Party ID option.

```

Sending Message to 192.168.2.1:5060:
INVITE sip:5000@192.168.2.1:5060;transport=udp SIP/2.0
Via: SIP/2.0/UDP 192.168.2.180:5060;branch=z9hG4bK1645487913
From: <sip:20001@192.168.2.1:5060>;user=phone;tag=406202416
To: <sip:5000@192.168.2.1>
Call-ID: 847230278@192.168.2.180
CSeq: 2 INVITE
Contact: <sip:2000@192.168.2.180:5060>
Max-Forwards: 30
User-Agent: VOPTech
Remote-Party-ID: "138000000000"
<sip:138000000000@192.168.2.1>;party=calling;screen=no;privacy=off
Allow: INVITE, ACK, BYE, CANCEL, OPTIONS, NOTIFY, REFER, REGISTER,
MESSAGE, INFO, SUBSCRIBE
Content-Type: application/sdp
Content-Length: 226


```

Use CID as SIP Caller ID: GoIP4 use PSTN Caller ID in SIP invitee's Caller ID option and Remote Party ID option.

Sending Message to 192.168.2.1:5060:↵
INVITE sip:5000@192.168.2.1:5060;transport=udp SIP/2.0↵
Via: SIP/2.0/UDP 192.168.2.180:5060;branch=z9hG4bK1450498491↵
From: "13800000000" <sip:13800000000@192.168.2.1:5060>;tag=232569343↵
To: <sip:5000@192.168.2.1>↵
Call-ID: 1853068986@192.168.2.180↵
CSeq: 2 INVITE↵
Contact: <sip:13800000000@192.168.2.180:5060>↵
Max-Forwards: 30↵
User-Agent: **VOPTech**
Remote-Party-ID: "13800000000" <sip:
13800000000@192.168.2.1>;party=calling;screen=no;privacy=off↵
Allow: INVITE, ACK, BYE, CANCEL, OPTIONS, NOTIFY, REFER, REGISTER,
MESSAGE, INFO, SUBSCRIBE↵
Content-Type: application/sdp↵
Content-Length: 226↵

About H.323's PSTN Caller ID transmit; we will perfect it in later firmware.

3.8 GSM Group Mode

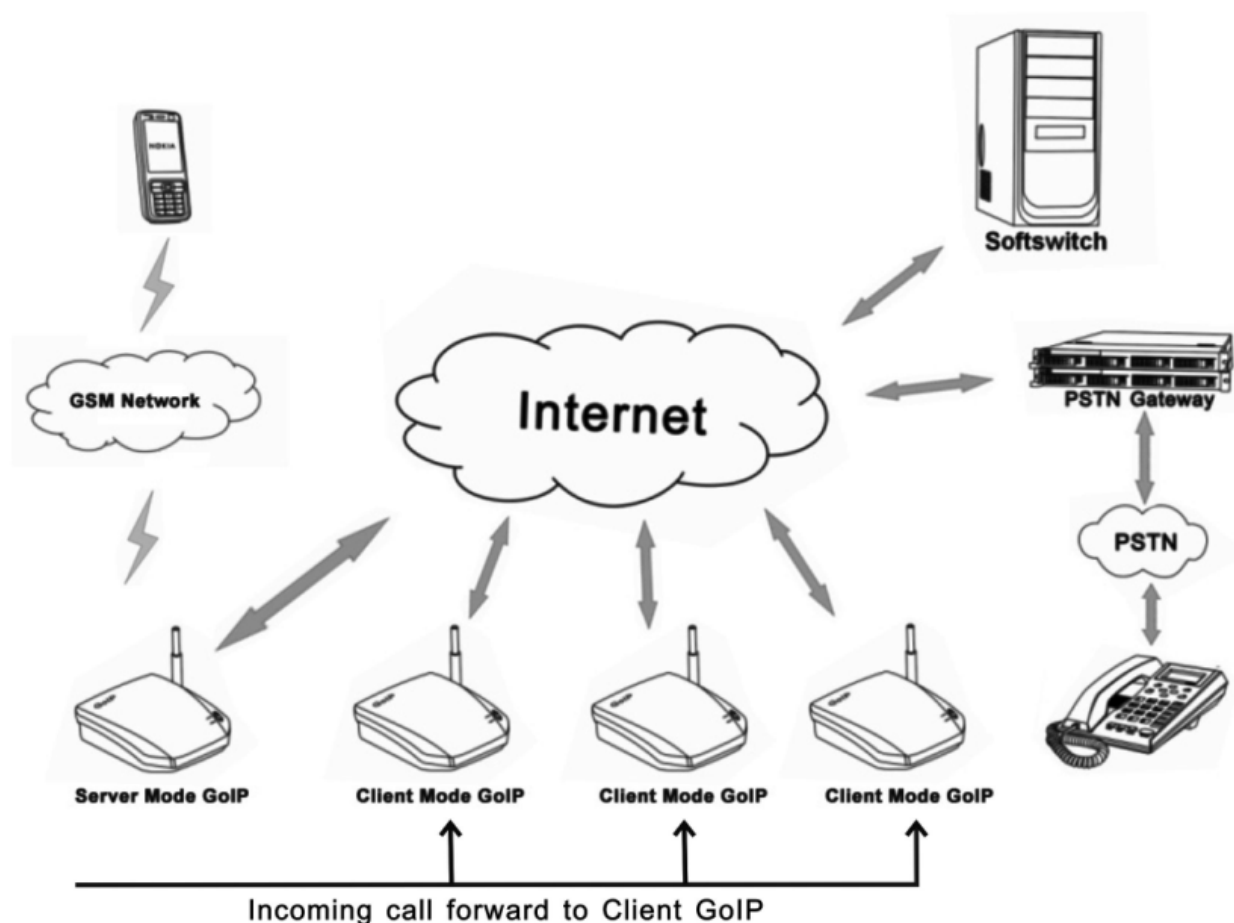

GoIP4 supported multi_devices cooperate with one group; it can work like a multi_channels GSM gateway. Any one GoIP4's channels are can work as Group Server Mode or Client Mode.

GSM Group Mode

Disable	▼
Disable	
As Server	
As Client	

Server Mode:

When one channels running in **Server Mode**;

It can auto forward the GSM's incoming call to any free client channels.

At this moment, you only offer this channel's GSM number to your user.

Client Mode:

When one channel running at **Client Mode**;

It will auto send itself GSM number and state to Server mode channel and waiting the incoming call forward from Server channel.

You must enter itself GSM number and Server GoIP4 device's IP address into follow option.

GSM Group Mode	As Client ▼
Server Address	<input type="text"/>
GSM Number	<input type="text"/>

Disable: When GolP4 run as alone mode, please set all channels to **Disable mode**.

3.9 Dial Plan

Dial Plan defines how a number (VoIP) is processed when GolP4 receives it. This field is located in the Calling Setting Window and it is available for both H.323 Phone and SIP Phone. The Dial Plan is very flexible and can be configured for a wide range of dialing applications.

Call Divert	
Forward to PSTN	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Forward Number (VoIP To PSTN)	<input type="text"/>
Forward Password (VoIP To PSTN)	<input type="text"/>
Dial Plan(VoIP to PSTN)	<input type="text"/>
Forward to VoIP	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Forward Number (PSTN To VoIP)	<input type="text"/>
Forward Password (PSTN To VoIP)	<input type="text"/>
Dial Plan(PSTN to VoIP)	<input type="text"/>

The basic syntax is "<event>:<action>|<event>:<action>|...", where

<event> defines the event to be matched. A event consists of a sequence of digits. If a specific digit has a limited range, use the syntax [A-B] where A and B are both digit (0 to 9) and B is greater than A. The length of the input number can be limited by using "X" to represent each unknown digit. If this field is omitted, it means any event.

<action> defines the action to be taken on the number received and it consists of "-" (minus), "+" (plus), and digits. "-" followed by digits means to remove the digits from the beginning of the number entered. "+" followed by digits means to add the digits in front of the number entered.

"|" means or and the order of priority is from left to right.

Note: For practical use, it should not be possible to reach the maximum length of the Dial Plan string.

Examples:

1. Dial Plan = "010:-010" means that the number dialed out will have the first 3 digits "010" removed when a number with the first digits as "010" is entered.
 - a) Number entered = "01082121234", actual number dialed = "82121234".
 - b) Number entered = "82121234", actual number dialed = "82121234".
2. Dial Plan = "1:+00" means that the number dialed out will have the "00" added in front of the number entered when a number with the first digit as "1" is entered.
 - a) Number entered = "1082121234", actual number dialed = "00182121234".
 - b) Number entered = "82121234", actual number dialed = "82121234".
3. Dial Plan = "001:-001+1751" means that the number dialed out will the first 3 digits "001" changed to "1751" when a number with the first digits as "001" is entered.
 - a) Number entered = "00182121234", actual number dialed = "175282121234".
 - b) Number entered = "82121234", actual number dialed = "82121234".
4. Dial Plan = "XXXX:" means that the input number is limited to 4-digit long and will be dialed out immediately when the fourth digit is entered.
5. Dial Plan = "13XXXXXXXXX:+0" means that the input number is restricted to 11-digit long and the first two digits must be "13". When this condition is matched, the number dialed out will have a leading "0" added.
 - a) Number entered = "13901234567", actual number dialed = "013901234567".
 - b) Number entered = "12801234567", actual number dialed = "12801234567".
6. Dial Plan = "13[6-9]XXXXXXXXX:+0" means that the input number is restricted to 11-digit long and the first two digits must be "13" and the third digit can be 6, 7, 8, or 9. When this condition is matched, the number dialed out will have a leading "0" added.
 - a) Number entered = "13901234567", actual number dialed = "013971234567".
 - b) Number entered = "13001234567", actual number dialed = "13001234567".


Please note that the above samples are simple and intended to show the meaning of various rules. They may not have any practical meaning. A combination of these rules (joined with the symbol "|") can be realized for a much more complicated dialing application.

3.10 Gain Settings...

A hidden webpage is provided to set the receiving and transmit gains of VoIP Channel. The URL link is:

http://xxx.xxx.xxx.xxx/default/en_US/gain.html


THIS PAGE IS INTENDED FOR AN EXPERIENCED USER OR AN ADMINISTRATOR ONLY. PLEASE SET THE GAINS WITH CAUTIONS.

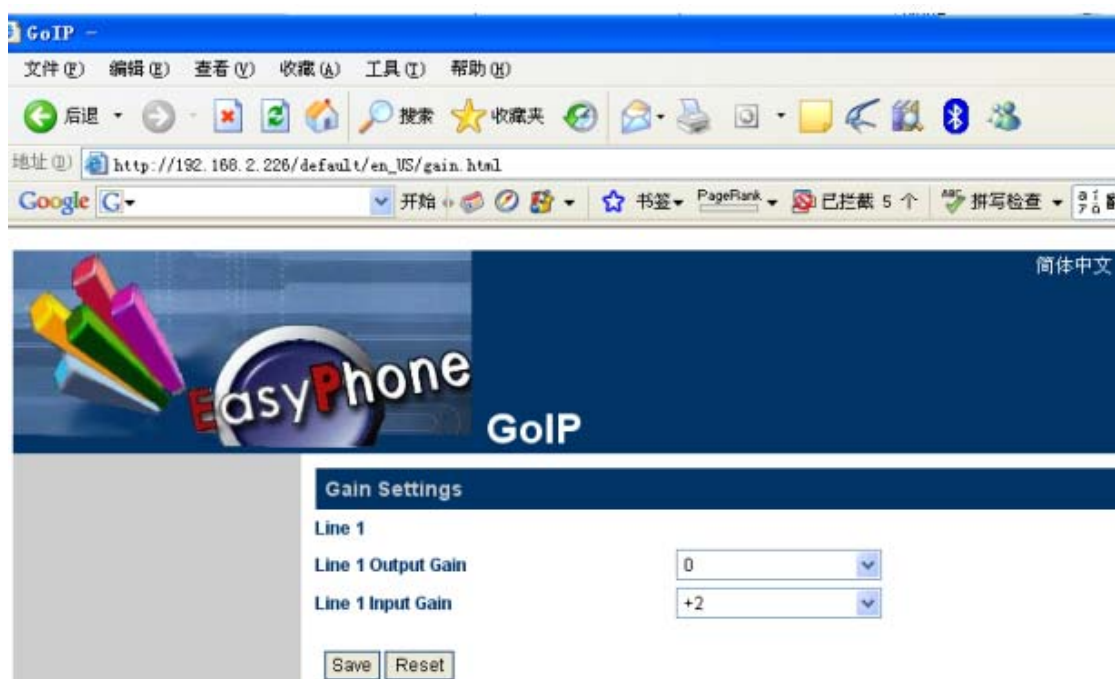

Note: A too low or too high input gain MAY affect the sensitivity of DTMF detections

3.11 Network Configuration

Click on "Network" tab in the left menu column to configure the LAN and PC ports.

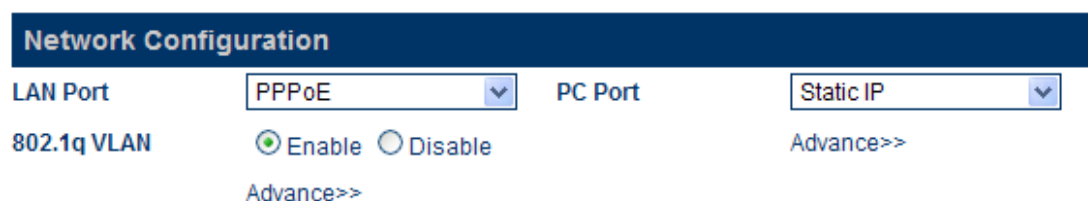

3.11.1 LAN Port

Three LAN Port modes are supported: DHCP, Static IP, PPPoE.

Copyright©2009 VOPTel Technology Co., Ltd All Rights Reserved.

Network Configuration	
LAN Port	PPPoE
User name	DHCP
Password	Static IP
	PPPoE
802.1q VLAN	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
VLAN Id	
VLAN QoS	
Advance<<	
Ethernet(MAC) Address	
IP Broadcast Address	

1) DHCP

Choose DHCP if a local DHCP host is available. This allows the GoIP4 Gateway to obtain network information (IP Address, Subnet Mask, Default Route, Primary DNS, Secondary DNS, and other DHCP options) from the DHCP host.

2) Static IP

Network Configuration	
LAN Port	Static IP
IP Address	
Subnet Mask(optional)	
Default Route	
Primary DNS	
Secondary DNS(optional)	

Choose Static IP if your network topology requires. Please fill in Fill in the IP Address, Subnet Mask, Default Route, Primary DNS, and Secondary DNS (optional) as provided by your network administrator.

3) PPPoE

Network Configuration	
LAN Port	PPPoE
User name	
Password	

PPPoE is a common dial up method for you network modem (Cable / xDSLs). Choose this if your network environment requires. Enter the User Name and Password as provided by your ISP.

4) 802.1q VLAN

This QoS feature requires your QoS support of your network to improve voice data

traffics. Please consult your network administrator for proper settings.

5) Advanced...

The **Advanced** settings allow the user to set the broadcast address and to clone a MAC address instead of using the factory preset MAC address. Please consult your network administrator for further information.

Advance<<

Ethernet(MAC) Address	<input type="text"/>
IP Broadcast Address	<input type="text"/>

3.11.2 PC Port Configurations

The PC Port allows addition network devices to be attached behind the GoIP4 Gateway. It offers both Bridge and Static IP modes to meet your network topology. It is factory preset to the Static IP mode with the IP address 192.168.8.1.


PC Port	
PC Port	Static IP
IP Address	192.168.8.1
Subnet Mask	255.255.255.0
DHCP Server	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Starting Address	192.168.8.150
Ending Address	192.168.8.200
Static DNS(optional)	
Advanced>>	

1) Bridge Mode

Select **Bridge** mode if your network topology requires the network devices (PC or others) to be in the same network segment as the GoIP4 Gateway. In this case, the GoIP4 Gateway functions as an Ethernet Switch.

2) Static IP Mode (Default Setting)

Select **Static IP** mode for a new network segment for the network devices behind the GoIP4 Gateway. In this case, the GoIP4 Gateway functions as an Ethernet Router. Fill in the **IP Address** field with a new segment address that is different from that for the LAN port. Please select the **Subnet Mask** accordingly. A commonly used value is 255.255.255.0.

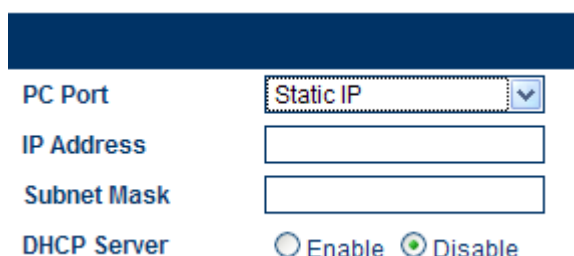


PC Port Static IP

IP Address

Subnet Mask

DHCP Server ☐ Enable ☒ Disable

Enable the DHCP Server if you want the GoIP4 Gateway functions as a local DHCP host for the PC segment. This will enable the GoIP4 Gateway to assign IP Addresses to network devices that are attached to the PC port segment.

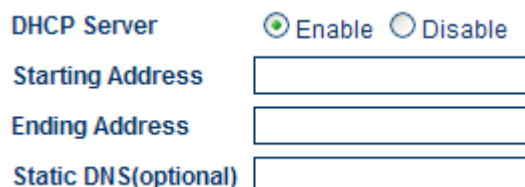

DHCP Server ☒ Enable ☐ Disable

Starting Address

Ending Address

Static DNS(optional)

Specify the Starting Address, Ending Address, and Static DNS accordingly.

4) Advanced...

The **Advanced** settings allow the user to set the broadcast address and to clone a MAC address instead of using the factory preset MAC address. Please consult your network administrator for further information.




[Advance<<](#)

Ethernet(MAC) Address

IP Broadcast Address

3.12 Save Configuration

To confirm and commit all changes made, click on the **Save Changes** tab. Otherwise, all changes will be discarded. Once all changes are saved, the following screen message is displayed.

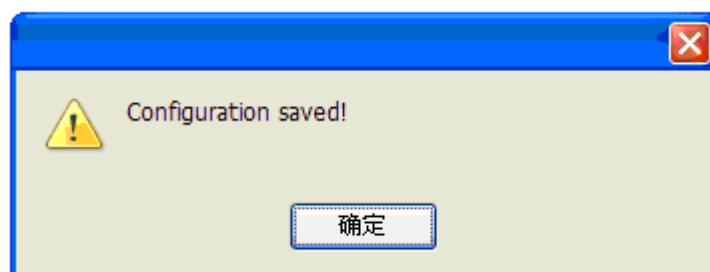

3.13 Discard Changes

To discard all changes made, click on the **Discard Changes** tab.

3.14 Tools Menu

Select the **Tools** to access the following functions: **Online Upgrade**, **Change Password**, **Reset Config**, and **Reboot**.

The image shows a web interface. On the left is a vertical menu with four items: 'Status', 'Configurations', 'Tools' (which is highlighted in blue), and 'Reboot'. To the right of the menu, under the 'Tools' section, is a sub-header 'Online Upgrade' in a dark blue box. Below this, the text 'Last Upgrade Time:' is followed by a blank space. Then 'Current Version: GHS-3.01' is displayed. Below that, 'Upgrade Site:' is followed by a text input field and a 'Start' button.

3.14.1 Online Upgrade

To perform a firmware upgrade, select the **Online Upgrade** tab to access the page below.

The image shows the 'Online Upgrade' page. It has a dark blue header with the text 'Online Upgrade'. Below the header, the text 'Last Upgrade Time:' is followed by a blank space. Then 'Current Version: GHS-3.01' is displayed. Below that, 'Upgrade Site:' is followed by a text input field and a 'Start' button.

Enter the update link as provided by your service provider. A sample link is:

voptech.com/update/GHS-3.01-18.pkg

Click the **Start** button to start the firmware upgrade.

WARNING: POWER SHUTDOWN / FAILURE DURING FIRMWARE UPGRADE MAY PERMINENTLY DAMAGE THE GOIP4 GATEWAY.

3.14.2 Change Password

Click on the Change Password tab to access the page below.

The screenshot displays two sections for changing passwords. The first section, titled 'User Level', contains a 'New Password:' text label followed by an empty input field, and a 'Confirm Password:' text label followed by another empty input field. To the right of the confirm input field is a yellow button labeled 'Change'. The second section, titled 'Administration Level', follows a similar layout with 'New Password:', 'Confirm Password:', and input fields, also ending with a yellow 'Change' button.

A) User Password

This is the password for the user name/ID "user". The default password is "1234". This user name is limited to access the Network Configuration menu.

B) Administrator Password (default: admin)

This is the password for the user name/ID "admin". The default password is "admin". This user name allows full access to all configuration settings available.

3.14.3 Reset Configuration

Click on the Reset Config tab to reset the GoIP4 Gateway to its factory default settings.

3.14.4 Reboot the Device

Click on the Reboot tab to reboot the GoIP4 Gateway.

4 Hardware Specifications

Characteristics of the hardware	Parameter	Remarks
Processor	ARM9E 133MHz	
DSP	VPDSP101-4 100MHz	
RAM	16M	
Flash	4M	
Power	DC12V/2000mA +-10%	Input AC100V to AC240V
GSM Module Type	Default 900M/1800M	
	Optional 850M/1900M	
Consumption	The Maximum 5 W	
LEDs	RUN, GSM, LAN, PC,GSM	
Network Ports	2 RJ45; Supported NAT	100/10BASE-T
Weight	900 Grams	Full Set
Working Temperature	0—40℃	
Working Humidity	40%—90% Not Congealed	
Colour	Grey	
GSM SIM Ports	4	
VoIP Channels	4	

5 Manufactory Parameters

Parameters		Default Setting
Network	LAN	DHCP (Auto Obtain)
	PC	Static IP:192.168.8.1 DHCP Server Running
Password	admin	admin
	user	1234
Time Zone		GMT+8

Note : This default parameter are unsuitability the customization's products.